



- ◆ Auto Pump (AP) Setup

For automatically refilling the humidifier when the water is below the sensor.

Setup

- ◆ Turn off humidifier
- ◆ Turn off pump
- ◆ Plug power cable from pump to AP port
- ◆ Connect water tubing from pump 'OUT' port to humidifier water intake port
- ◆ Connect water tubing from the pump 'IN' port to your water tank. Use a 15/64 inch (6.0mm) drill bit and create 2 holes on the top of the water tank. Insert the tubing in one of the holes.
- ◆ Turn on humidifier
- ◆ Turn on pump

- ◆ MP - For Manual Pump — 12V port, for water pump. Use for Manually control water pump.(pump water by turn on or off switch on pump

Setup

- ◆ Turn off humidifier
- ◆ Turn off pump
- ◆ Plug power cable from pump to MP port
- ◆ Connect water pipe from pump 'Out' port to humidifier water hole
- ◆ Connect water pipe from pump 'IN' port to water tank (use a tank with cap then drilling a hole)
- ◆ Turn on humidifier
- ◆ Manually turn on or off pump